


ProGreen Plus 16ft RoundHouse

ASSEMBLY INSTRUCTIONS

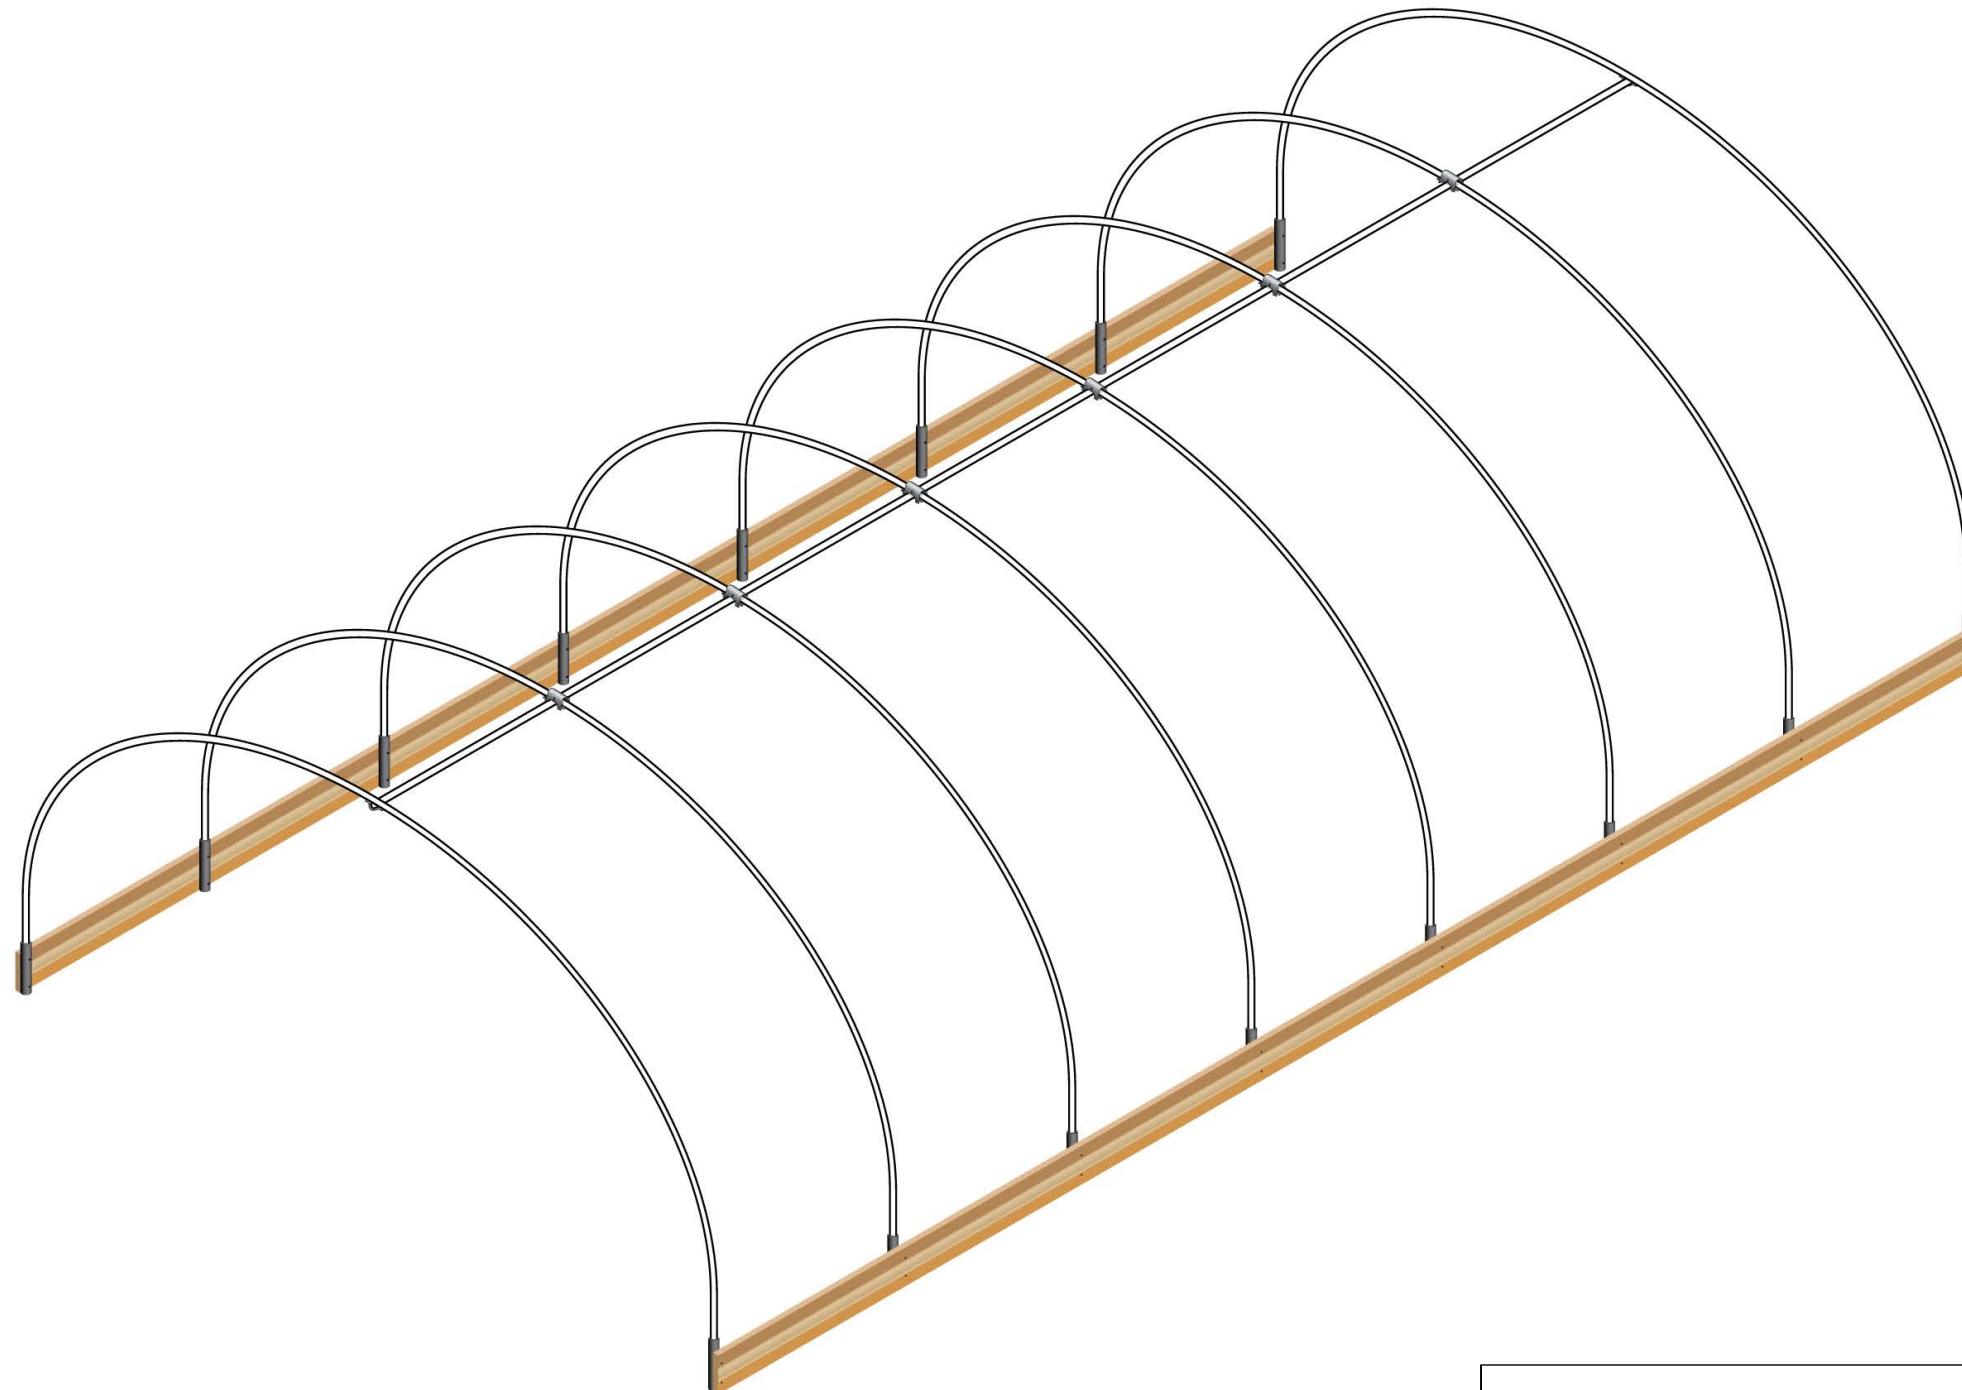


This manual should be referenced as a generic set of instructions. Some details shown may not correspond exactly with your project.

Step 1: Ground Stakes


Lay out ground stakes in two parallel rows with equal spacing between stakes. Typical spacing is every 4 ft. but this may vary. To ensure that the building footprint is in square, measure corresponding diagonals and adjust layout so that they are the same length.

To embed ground stakes, slide a drive cap into the top end and pound to the appropriate depth with a sledge hammer or post driver. Remove drive cap and reuse for remaining stakes.

Bolt baseboard* to outside of each row of ground stakes as shown in Section A.

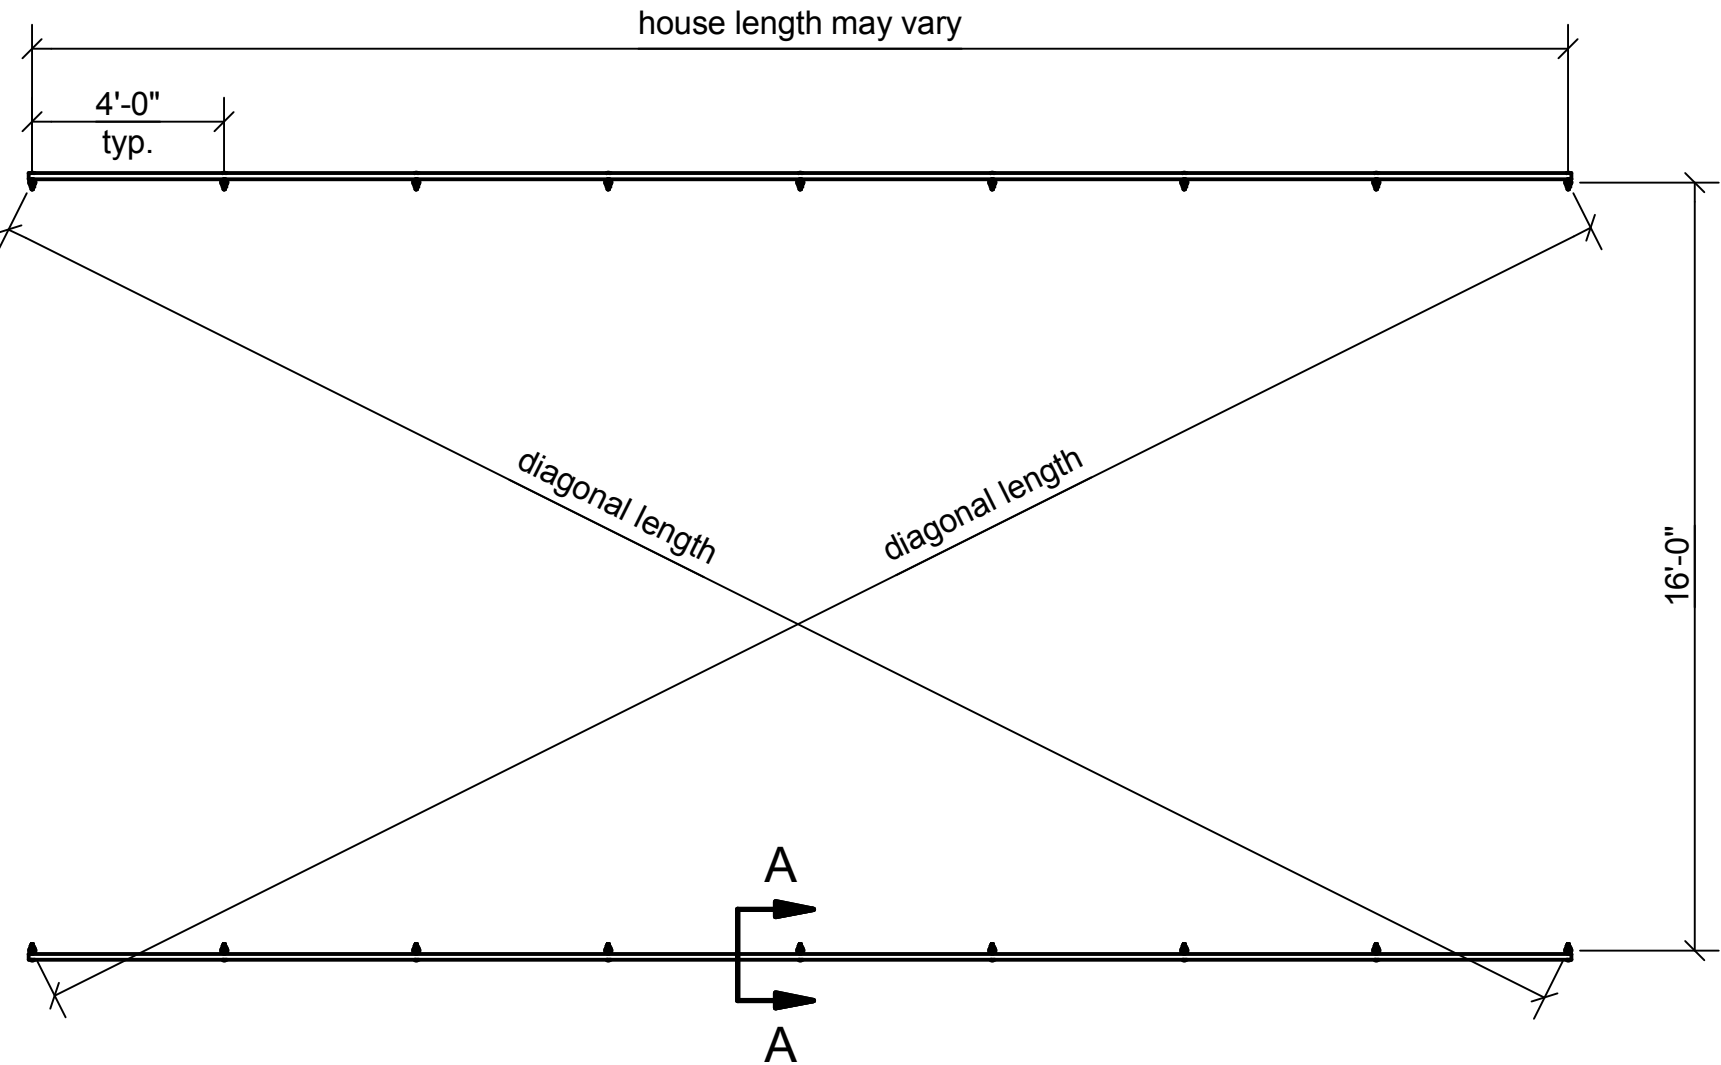

Ground Stake Layout



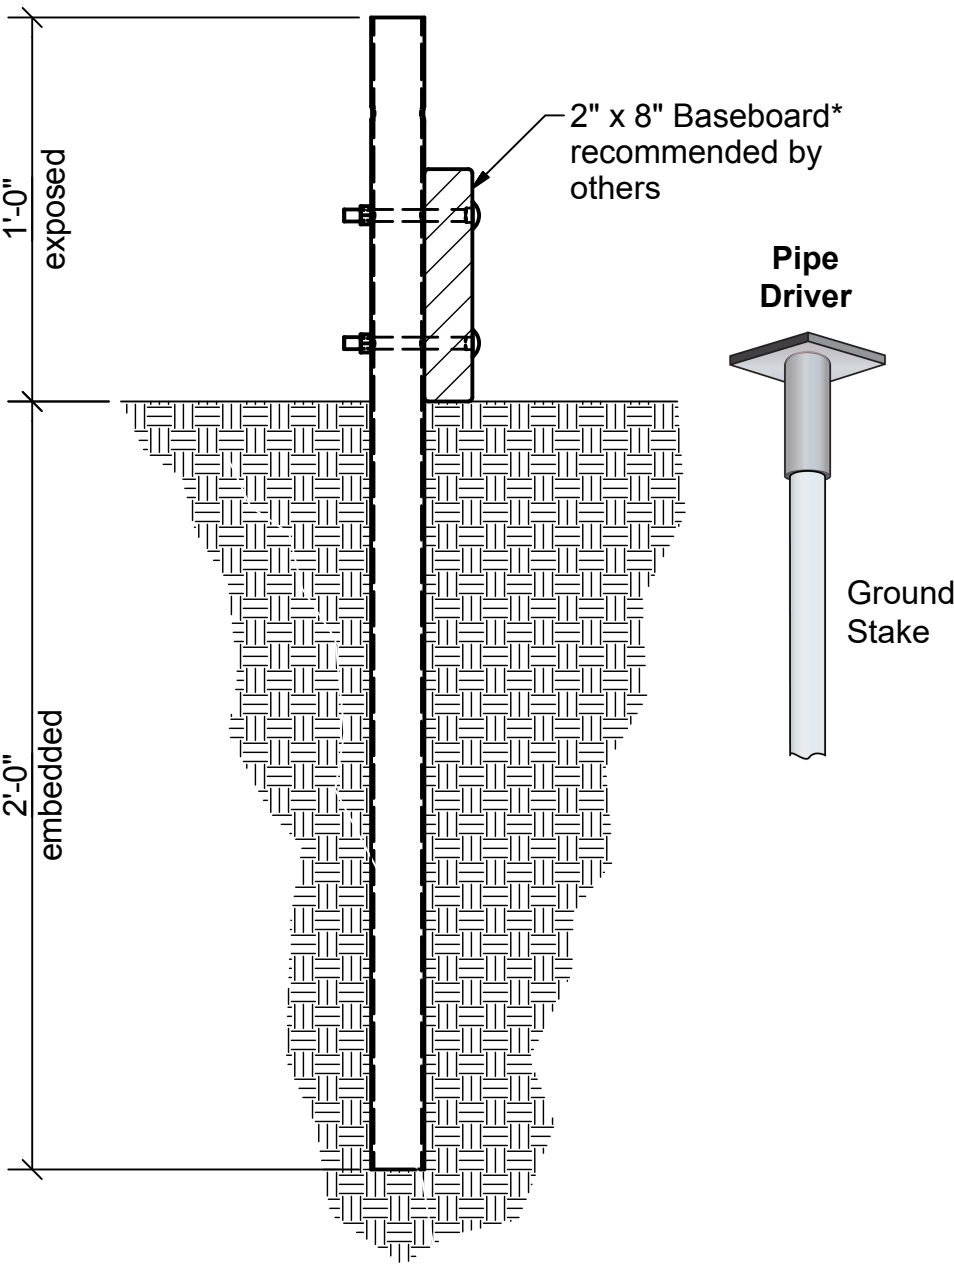




SECTION A

*Baseboard not supplied by Carlin

Step 2: Setting Bows






Bows are under-bent so that they fit tightly into ground stakes.

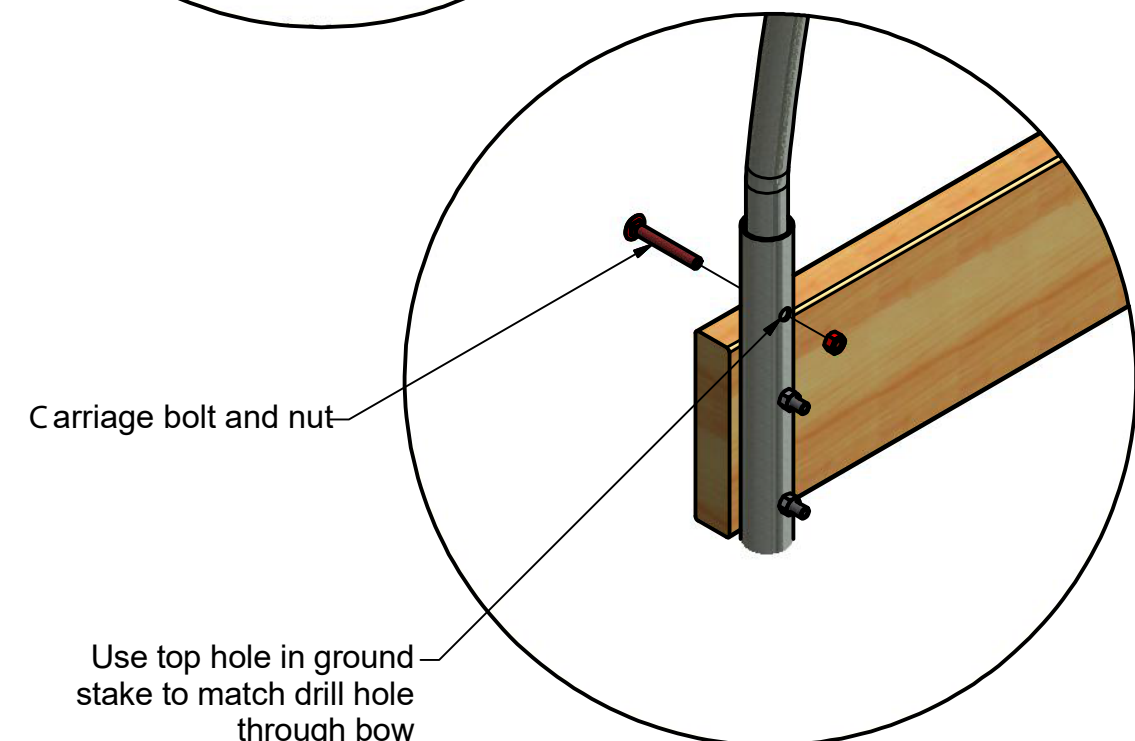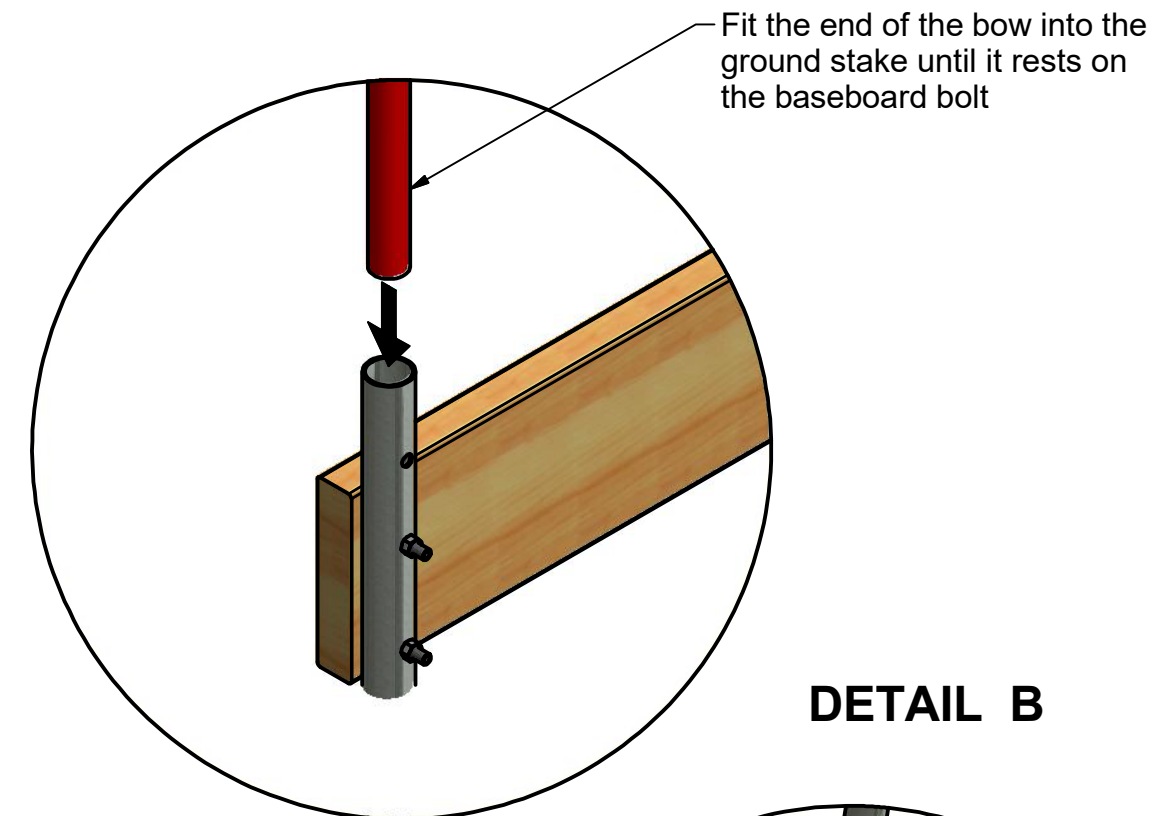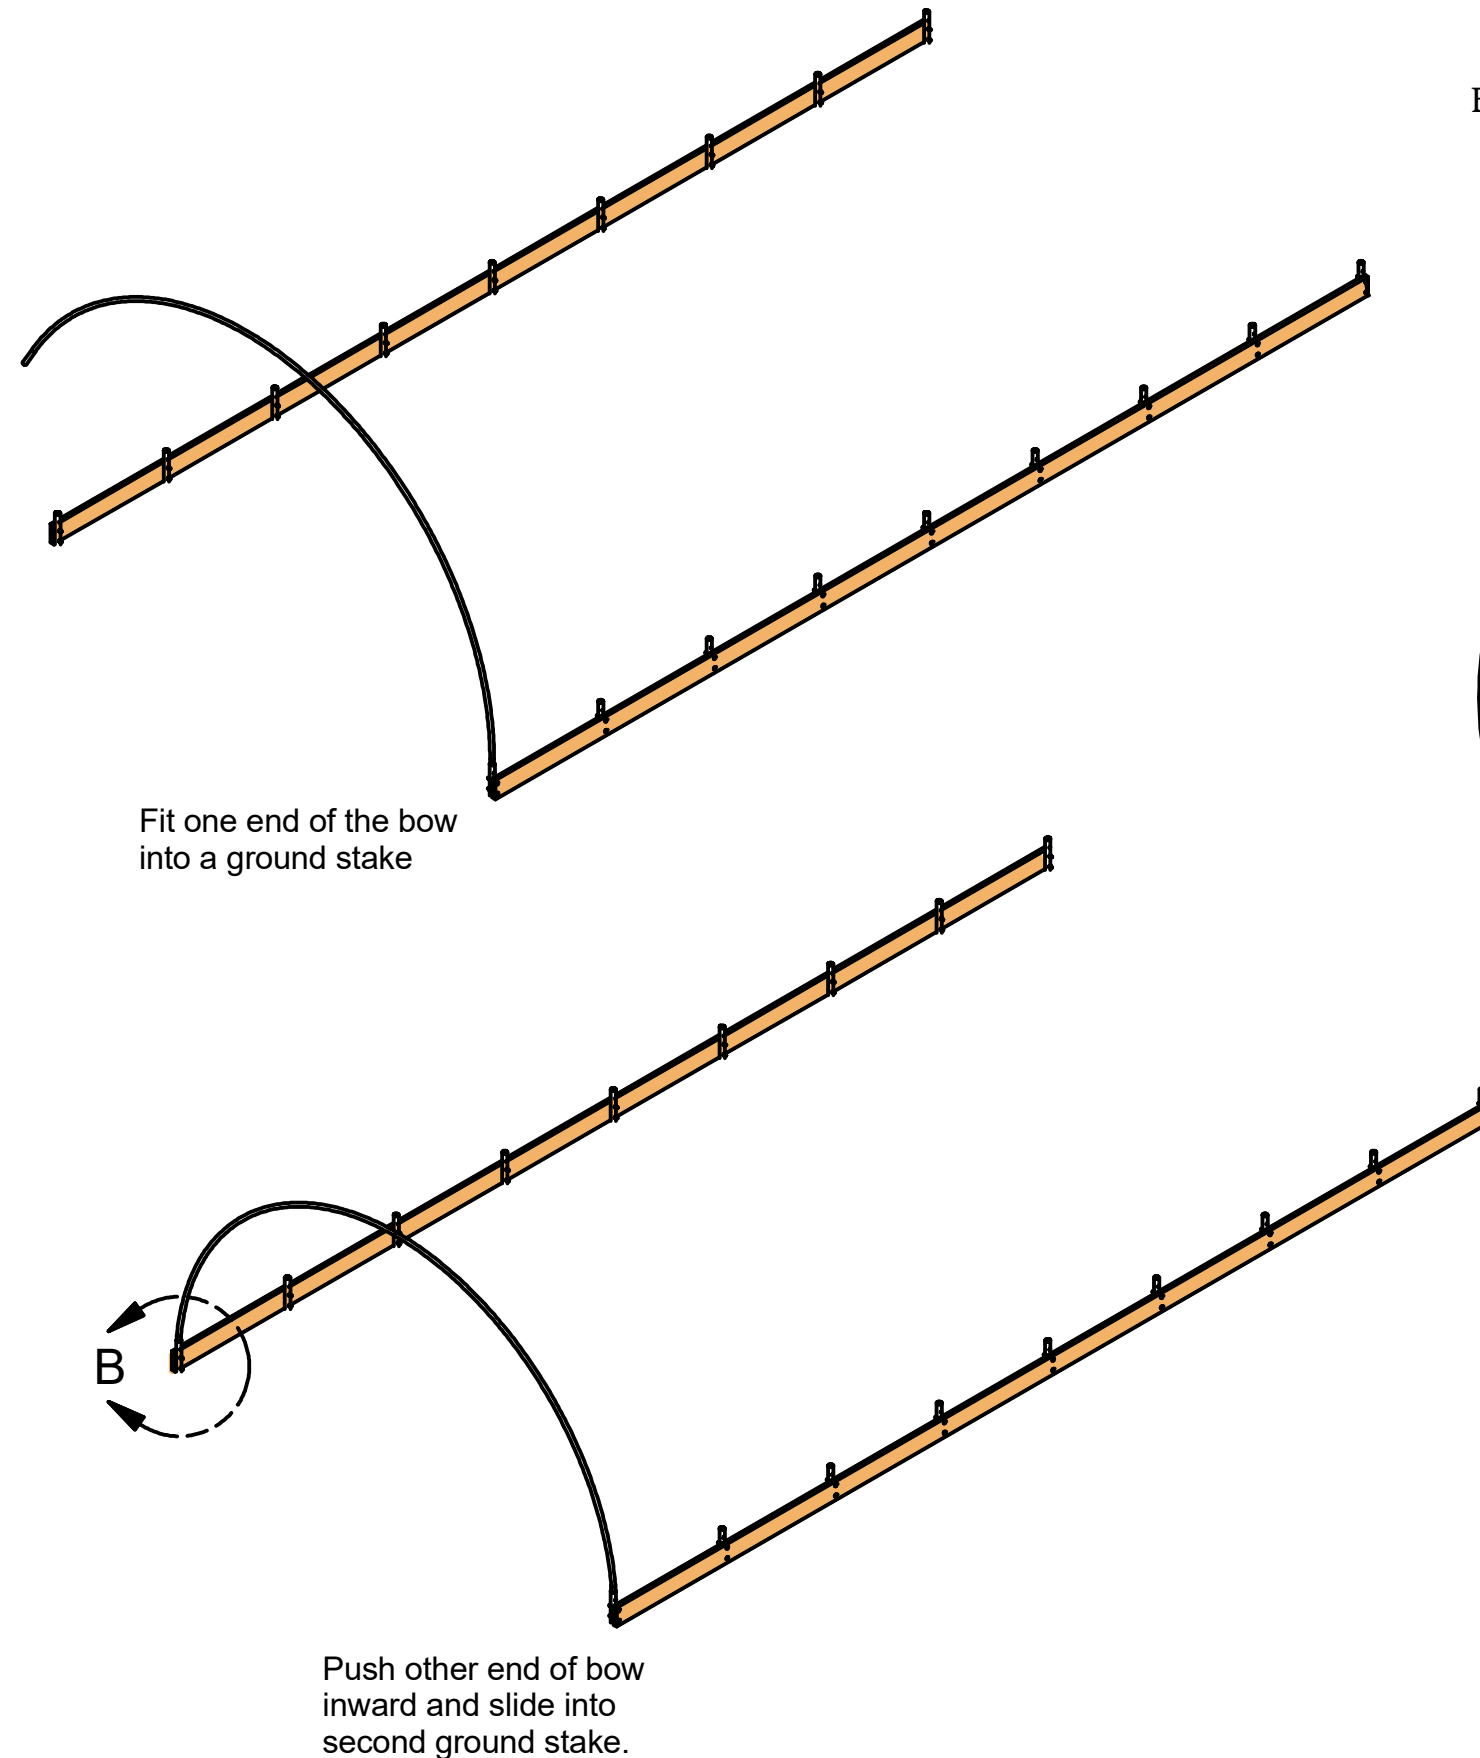

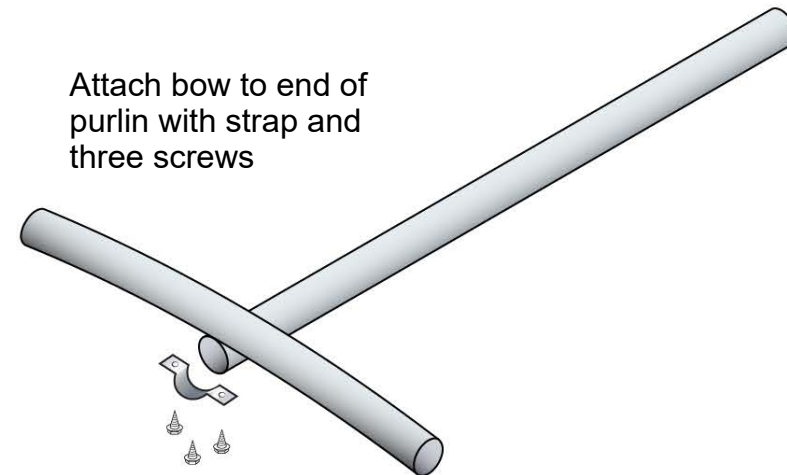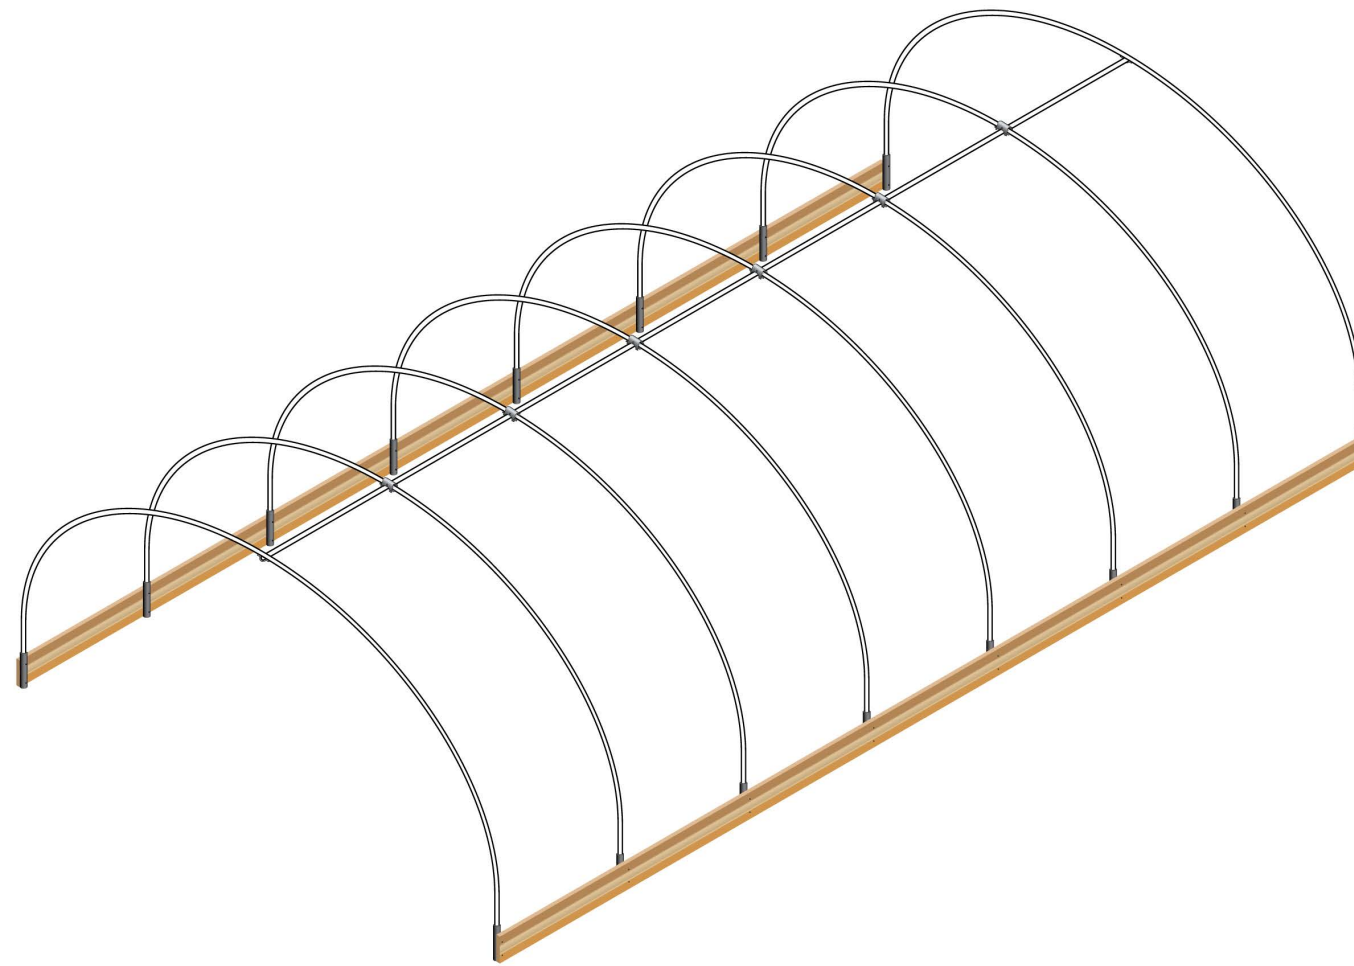

Step 3: Purlin

Once the second bow is set, begin attaching the top purlin. Connect each additional bow to the ridge purlin to keep the structure stable during construction.

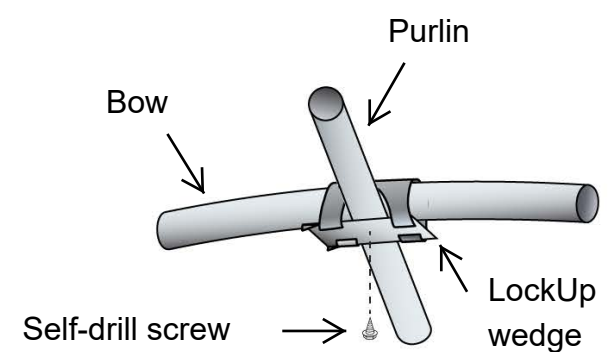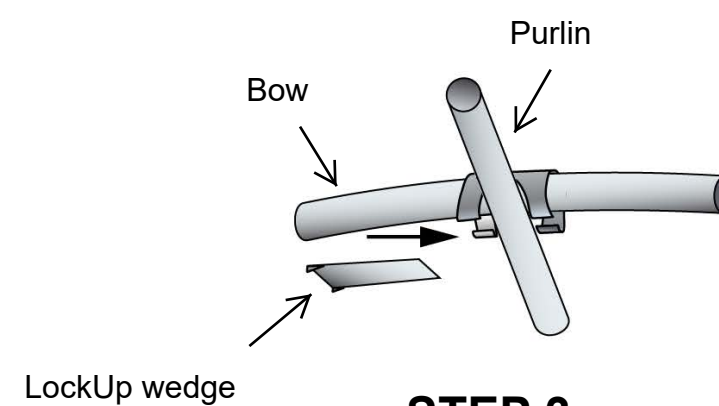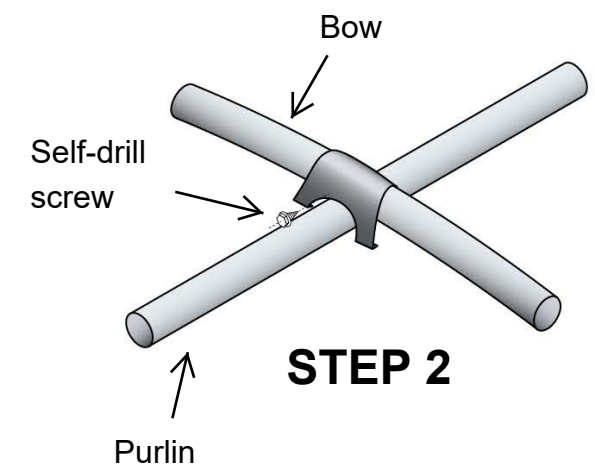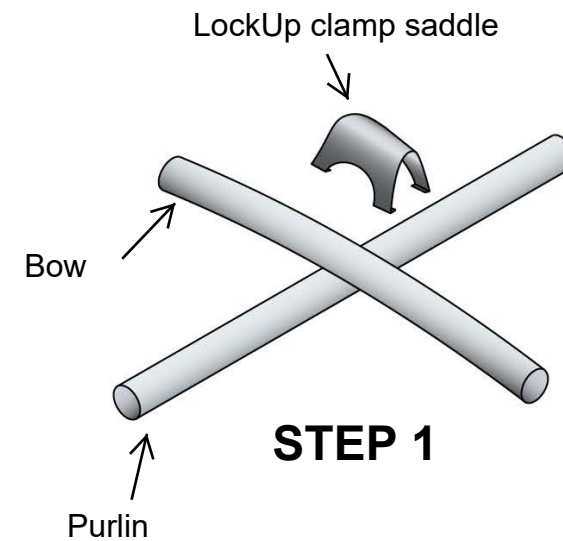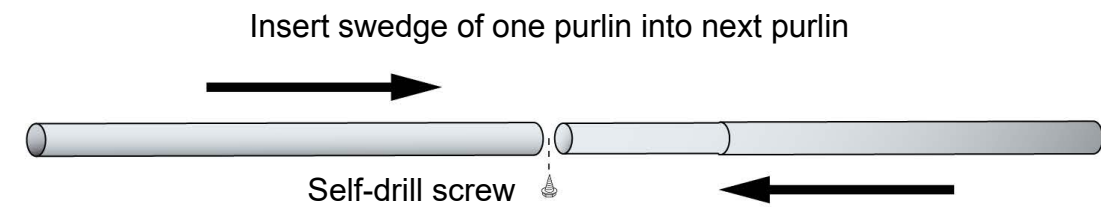

PURLIN SPLICE DETAIL